

Saxophone Serial Numbers

The serial number on a saxophone is usually located on the opposite side of the body tube from the low D key. This is just above the body to bow brace. Some saxophones, like the early Selmer's, had the serial number in both places, on the bell and back of the body tube. In this case use the serial number on the bell to date your saxophone. [🔗](#)

BUFFET	
Serial#	Year
2925	1952
3115	1953
3390	1954
3763	1955
4226	1956
4817	1957
5392	1958
6172	1959
6808	1960
7416	1961
8656	1962
9669	1963
10064	1964
11749	1965
12778	1966
13766	1967
14487	1968
15347	1969
16323	1970
17319	1971
18445	1972
19787	1973
21441	1974
22687	1975
24417	1976
26151	1977
27280	1978
28733	1979
30190	1980
31539	1981
32961	1982
33924	1983
34664	1984
35733	1985