

Saxophone Serial Numbers

The serial number on a saxophone is usually located on the opposite side of the body tube from the low D key. This is just above the body to bow brace. Some saxophones, like the early Selmer's, had the serial number in both places, on the bell and back of the body tube. In this case use the serial number on the bell to date your saxophone. [🔗](#)

CONN	
Serial#	Year
9600	1905
10800	1906
12000	1907
13000	1908
15400	1909
17800	1910
21200	1911
22500	1912
25000	1913
30000	1914
35000	1916
40000	1917
50000	1919
58000	1920
64000	1921
83000	1922
101775	1923
124600	1924
145400	1925
167900	1926
193450	1927
209250	1928
224600	1929
237800	1930
244700	1931
249230	1932
256501	1933
260000	1934
263500	1935
271000	1936
278000	1937
284000	1938
285000	1939
288300	1940
295250	1941
304500	1942
309250	1943
309300	1944
310200	1945
314000	1946
320000	1947
327150	1948
332150	1949
337250	1950
341850	1951
341851	1952