

Saxophone Serial Numbers

The serial number on a saxophone is usually located on the opposite side of the body tube from the low D key. This is just above the body to bow brace. Some saxophones, like the early Selmer's, had the serial number in both places, on the bell and back of the body tube. In this case use the serial number on the bell to date your saxophone. [🔗](#)

HOLTON	
Serial#	Year
1	1901
254	1902
476	1903
526	1904
1151	1905
1872	1906
3345	1907
4630	1908
6071	1909
9474	1910
12402	1911
15950	1912
20807	1913
21100	1914
31622	1915
33671	1916
37909	1917
41,070 - 43,972	1918
55,000 - 55,249	1918
43,973 - 47,600	1919
55,250 - 57,040	1919
47,601 - 49,817	1920
57,041 - 58,499	1920
70,000 - 70,549	1920
49,818 - 54,999	1921
58,500 - 59,499	1921
70,550 - 73,199	1921
59,500 - 60,599	1922
73,200 - 76,099	1922
60,600 - 61,649	1923
76,100 - 81,000	1923
61,650 - 62,199	1924
81,001 - 85,600	1924
62,200 - 62,899	1925
85,900 - 89,849	1925
62,900 - 63,149	1926
89,850 - 92,799	1926
63,150 - 63,299	1927
92,800 - 97,199	1927
63,300 - 63,549	1928
97,200 - 101,399	1928
63,550 - 63,849	1929
101,400 - 105,199	1929
63,850 - 64,049	1930
105,200 - 108,399	1930
64,050 - 64,149	1931