

Saxophone Serial Numbers

The serial number on a saxophone is usually located on the opposite side of the body tube from the low D key. This is just above the body to bow brace. Some saxophones, like the early Selmer's, had the serial number in both places, on the bell and back of the body tube. In this case use the serial number on the bell to date your saxophone. [🔗](#)

KING	
Serial#	Year
5000	1915
78000	1925
126000	1930
161000	1935
220000	1940
275000	1945
305000	1950
340000	1955
370000	1960
406500	1965
457600	1970
511750	1975