

## Saxophone Serial Numbers

The serial number on a saxophone is usually located on the opposite side of the body tube from the low D key. This is just above the body to bow brace. Some saxophones, like the early Selmer's, had the serial number in both places, on the bell and back of the body tube. In this case use the serial number on the bell to date your saxophone. [🔗](#)

<b>MARTIN</b>		
Serial#		Year
17221		1919
19482		1920
19933		1921
23781		1921
29942		1922
34838		1923
40644		1924
48489	152342	1925
54853		
67852	162852	1926
	172051	
79254		1927
86687		1928
*192536	1027	1929
*first digit dropped on most serial numbers		
98324	2982	1930
101622	7119	1931
105096		1932
106546		1933
108301		1934
10758	111253	1935
14526	116551	1936
15396	118038	1937
18861	126998	1938
20563	132070	1939
23231	136040	1940
24572	140199	1941
26643	144455	1942
	145322	1943
		1944
	145352	1945
	154289	1946
	161520	1947
	165326	1948
	170395	1949
	172215	1950
172449 first Imperial		
	175140	1951
41693	179317	1952
45824 Indiana	183125	1953
49586 Indiana	187614	1954
	193747	1955
56162	196213	1956
66719	203809	1957
66727	201917	1958
70988	205377	1959